


**PARTS BREAKDOWN**

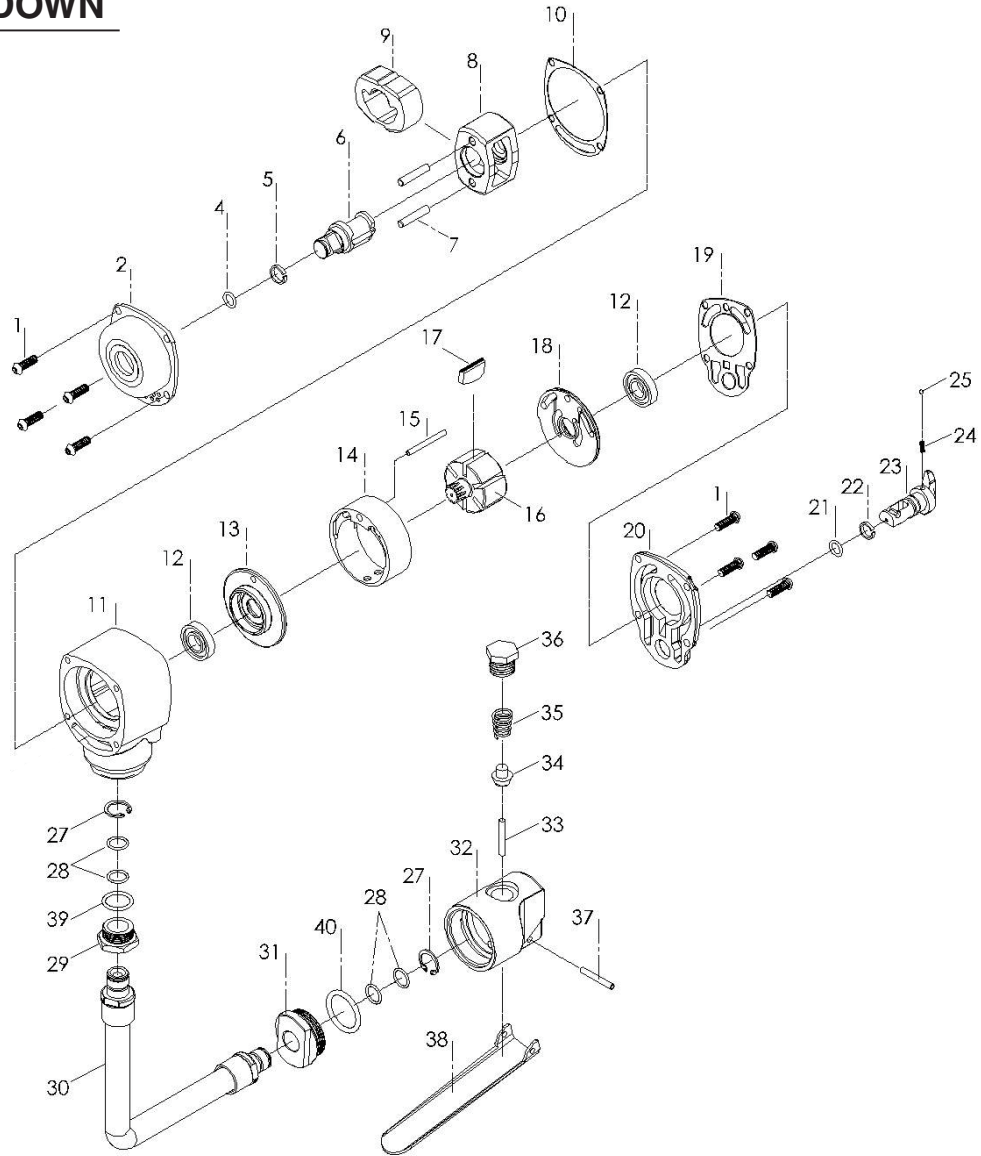

**PARTS LIST**

Index	Part No.	Description	Qty	Index	Part No.	Description	Qty
1	1832-01	Socket Cap Screw	8	21	1822-28	O-Ring	1
2	1830-02	Hammer Housing	1	22	1822-29	E-Ring	1
4	1822-04	O-Ring	1	23	1822-30	Regulator Knob	1
5	1822-05	Retainer Ring	1	24	1822-31	Regulator Valve Detent Spring	1
6	1832-06	Drive Anvil	1	25	1822-32	Regulator Valve Detent Ball	1
7	1832-07	Hammer Pin	2	27	1830-27	Retainer Ring	2
8	1832-08	Hammer Cage	1	28	1830-28	O-Ring	4
9	1832-09	Hammer Cam	1	29	1830-29	Intake screw	1
10	1830-10	Hammer Housing Gasket	1	30	1830-30	Flex hose	1
11	1830-11	Housing	1	31	1830-31	Cylinder cover	1
12	1822-18	Ball Bearing R8	2	32	1830-32	Back Head	1
13	1822-19	Front End Plate	1	33	1830-33	Valve Stem	1
14	1822-20	Cylinder	1	34	1830-34	Valve Seat	1
15	1822-21	Dowel liner	1	35	1830-35	Spring	1
16	1832-16	Rotor	1	36	1830-36	Throttle Cap	1
17	1822-23	Rotor Blade	6	37	1830-37	Spring Pin	1
18	1822-24	Rear End Plate	1	38	1830-38	Lever	1
19	1822-26	Motor Housing Gasket	1	39	1822-33	O-Ring	1
20	1822-27	Housing Cap	1	40	1822-34	O-Ring	1

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.