


PARTS BREAKDOWN

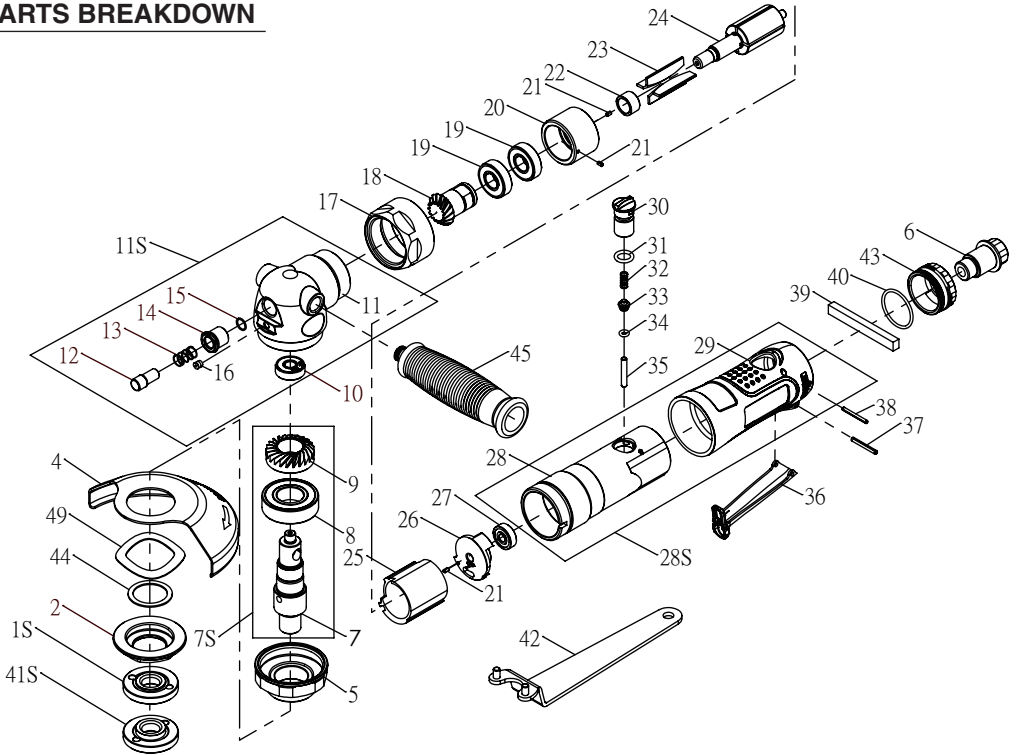

PARTS LIST

Index	Part No.	Description	Qty	Index	Part No.	Description	Qty	Index	Part No.	Description	Qty		
1	30045-01	Spacer (5/8"-11)	1	17	30045-17	Coupling Nut	1	37	30045-37	Spring Pin	1		
	30045-02	Spacer (M14x2.0)		18	30045-18	Gear Spindle	1	38	30045-38	Spring Pin	1		
2	30045-03	Lock Nut	1	19	30045-19	Bearing	2	39	30045-39	Muffler	1		
3	30045-04	Wave Washer	1	20	30045-20	Front Plate	1	40	30045-40	O-Ring	1		
4	30045-05	4.5" Wheel Cover	1	21	30045-21	Spring Pin	3	41S	30045-41	Spacer (5/8"-11)	1		
5	30045-06	Protecting Cover	1	22	30045-22	Spacer	1	41S	30045-42	Spacer (M14x2.0)	1		
6	30045-07	Inlet Bushing	1	23	30045-23	Rotor Blade	4	42	30045-43	Wrench	1		
7S	30045-08	Spindle Ass'y	1	24	30045-24	Rotor	1	43	30045-44	Exhaust Sleeve	1		
		7 Spindle (5/8"-11)		25	30045-25	Cylinder	1	44	30045-45	Washer	1		
		8 Bearing		26	30045-26	Rear End Plate	1	45	30045-46	Head Handle	1		
30045-09	30045-09	9 Bevel Gear	1	27	30045-27	Bearing	1						
		7A Spindle (M14x2.0)		28S	30045-28S	Housing Ass'y	1						
		8 Bearing		28	30045-28	28 Housing							
9 Bevel Gear	29	30045-29	Housing Cover										
11S	30045-10	Angle Head Housing Ass'y	1	30	30045-30	Valve Screw	1						
		10 Bearing		31	30045-31	O-Ring	1						
		11 Angle Head Housing		32	30045-32	Spring	1						
		12 Locking Pin		33	30045-33	Throttle Valve	1						
		13 Spring		34	30045-34	O-Ring	1						
		14 Locking Screw		35	30045-35	Parallel Pin	1						
		15 O-Ring		36	30045-36	Throttle Lever Ass'y	1						
		16 Grease Fitting											

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.